 


# Toggle switches 2 and 3 positions

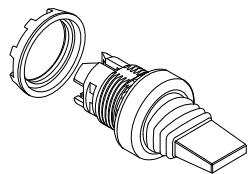

## Operator

Symbol	Bezel	Catalog No.	Ref. Code	List Price
<b>Toggle switch with 2 positions</b>				
<b>Maintained</b>				
	Black plastic	<b>MTS1-10B</b>	1SFA 611 300 R1006	\$ 18.00
	Metal	<b>MTS1-30B</b>	1SFA 611 300 R 3006	

 
## Toggle switch with 3 positions

**Momentary, spring return from A to B and from C to B**

	Black plastic	<b>MTS2-10B</b>	1SFA 611 301 R1006	18.00
	Metal	<b>MTS2-30B</b>	1SFA 611 301 R 3006	
<b>Maintained</b>				
	Black plastic	<b>MTS3-10B</b>	1SFA 611 302 R1006	18.00
	Metal	<b>MTS3-30B</b>	1SFA 611 302 R 3006	

## Contact blocks and holder

Blocks	Catalog No.	Ref. Code	List Price
1 NO with holder	<b>MCBH-10</b>	1SFA 611 605 R1101	\$ 10.00
1 NC with holder	<b>MCBH-01</b>	1SFA 611 605 R1110	10.00
2 NO with holder	<b>MCBH-20</b>	1SFA 611 605 R1102	18.00
2 NC with holder	<b>MCBH-02</b>	1SFA 611 605 R1120	18.00
1 NO + 1 NC with holder	<b>MCBH-11</b>	1SFA 611 605 R1111	18.00
1 NO without holder	<b>MCB-10</b>	1SFA 611 610 R1001	8.00
1 NC without holder	<b>MCB-01</b>	1SFA 611 610 R1010	8.00
Holder for 3 blocks	<b>MCBH-00</b>	1SFA 611 605 R1100	2.00

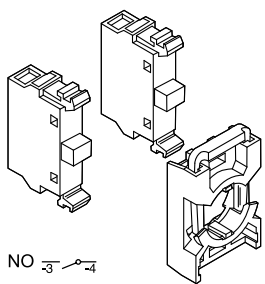

## Contact block functions

Block positions as seen from operator front.

### Two-position maintained switch

Handle position	Left block	Right block
A	O	O
C	x	x

 
 
O = not actuated (normal state)  
x = actuated (state changed)

### Three-position switch



Handle position	Left block	Middle block	Right block
A	O	x	x
B	O	O	O
C	x	x	O

O = not actuated (normal state)  
x = actuated (state changed)

## Center position connection detail

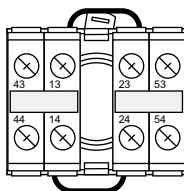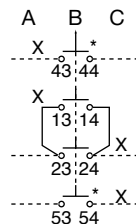

\* Contacts may be N.O. or N.C.

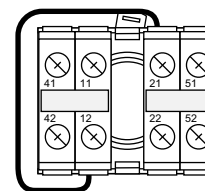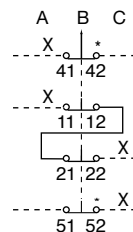  

\* Contacts may be N.O. or N.C.